

TA-V3

*AEP Model
UK Model
E Model*



INTEGRATED STEREO AMPLIFIER

SPECIFICATIONS

Amplifier section

Continuous RMS power output

At 1 kHz

38 + 38 watts (5% THD, 6 ohms)

33 + 33 watts (0.09% THD, 6 ohms)

At 20 Hz - 20 kHz, 0.09% THD

25 + 25 watts (6 ohms)

According to DIN 45500

25 + 25 watts (6 ohms)

Power bandwidth (IHF)

10 Hz - 30 kHz

Dynamic headroom 1.8 dB ('78 IHF)

Harmonic distortion Less than 0.09% at rated output

Intermodulation (IM) distortion

(60 Hz : 7 kHz = 4 : 1) Less than 0.09% at rated output

Frequency response PHONO : RIAA equalization curve ± 0.5 dB

TUNER

CD/AUX

TAPE

15 Hz - 50 kHz ± 0.3 dB

Residual noise Less than 100 μ V (6 ohms, network A)

Damping factor 30 (6 ohms, 1 kHz)

Inputs

	Sensitivity	Impedance	Maximum input capability (1 kHz)	S/N (weighting network, input level)
PHONO	2.5 mV	50 k Ω	120 mV	73 dB 75 dB* (A, 2.5 mV)
TUNER CD/AUX TAPE	150 mV	50 k Ω	—	98 dB 80 dB* (A, 150 mV)

* '78 IHF

Outputs

REC OUT

Voltage 150 mV

Impedance 4.7 kilohms

SPEAKER

Accepts speakers of 6 - 16 ohms.

HEADPHONES

Accepts low and high impedance headphones.

Tone controls

BASS

± 8 dB at 100 Hz

TREBLE

± 8 dB at 10 kHz

Loudness (att. 30 dB) + 8 dB at 100 Hz

— Continued on page 2 —

SAFETY RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK
ON THE SCHEMATIC DIAGRAMS AND IN THE
PARTS LIST ARE CRITICAL TO SAFE OPERATION.
REPLACE THESE COMPONENTS WITH SONY PARTS
WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS
MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.




SONY

SERVICE MANUAL

LOCATION AND FUNCTION OF CONTROLS

Each number in the photo is keyed to the descriptive text.

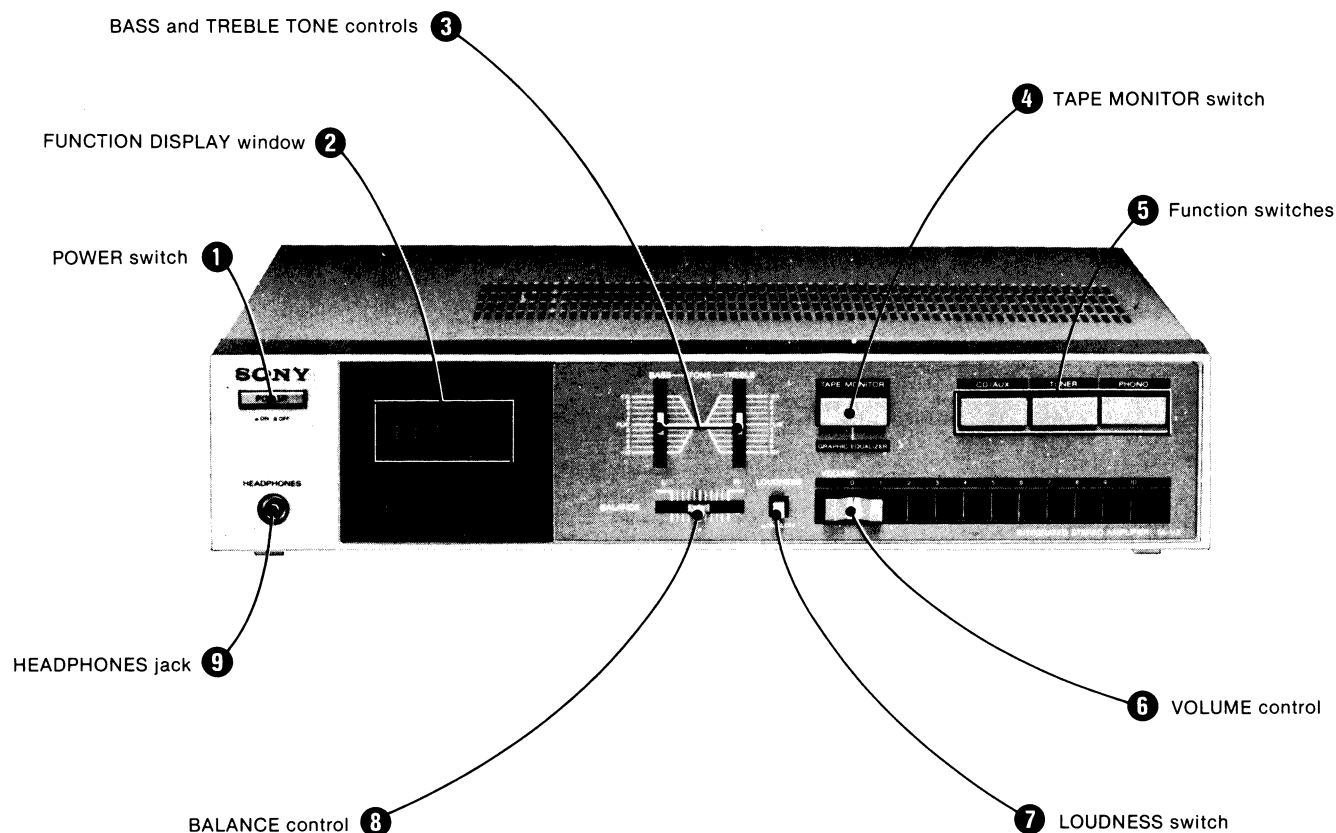

❶ POWER switch

Turns the operating power on or off.

❷ FUNCTION DISPLAY window

The program in use is displayed here.

❸ BASS and TREBLE TONE controls

These levers control the bass and treble response. Sliding the levers towards +10 increases the response and sliding them towards -10 decreases it. The center FLAT position provides a flat response.

❹ TAPE MONITOR switch

To listen to a taped program, depress this switch. "TAPE" is displayed in the FUNCTION DISPLAY window, and a playback output from the tape recorder connected to the TAPE RECORDER TAPE jacks can be heard.

When the graphic equalizer is connected, depress this switch after selecting the input source with the amplifier function switches. The input selector of the graphic equalizer must be set as required.

❺ Function switches

Depress one of these switches to select a desired program source other than a taped program. The program in use is displayed in the FUNCTION DISPLAY window.

PHONO: For record programs (connected to PHONO inputs)

TUNER: For off-the-air programs (connected to TUNER inputs)

CD/AUX: For CD or other auxiliary programs (connected to CD/AUX inputs)

❻ VOLUME control

Regulates the overall sound level.

Sliding the lever towards 10 increases the volume and sliding it towards 0 decreases the volume. Be sure to lower the volume whenever you turn the amplifier on or off or make system connections.

❼ LOUDNESS switch

Normally keep the switch released (□ OFF). When listening to program sources at a low VOLUME control setting, depress the switch (▢ ON).

This loudness control compensates for the human ear's decreased response to very low frequency sound at low volume levels, and provides an apparently uniform response.

❽ BALANCE control

Governs the amount of sound coming from each paired speaker to get optimum stereo effect.


❾ HEADPHONES jack

Accepts any low or high impedance stereo headphones.

SECTION 1

OUTLINE

1-1. BLOCK DIAGRAM

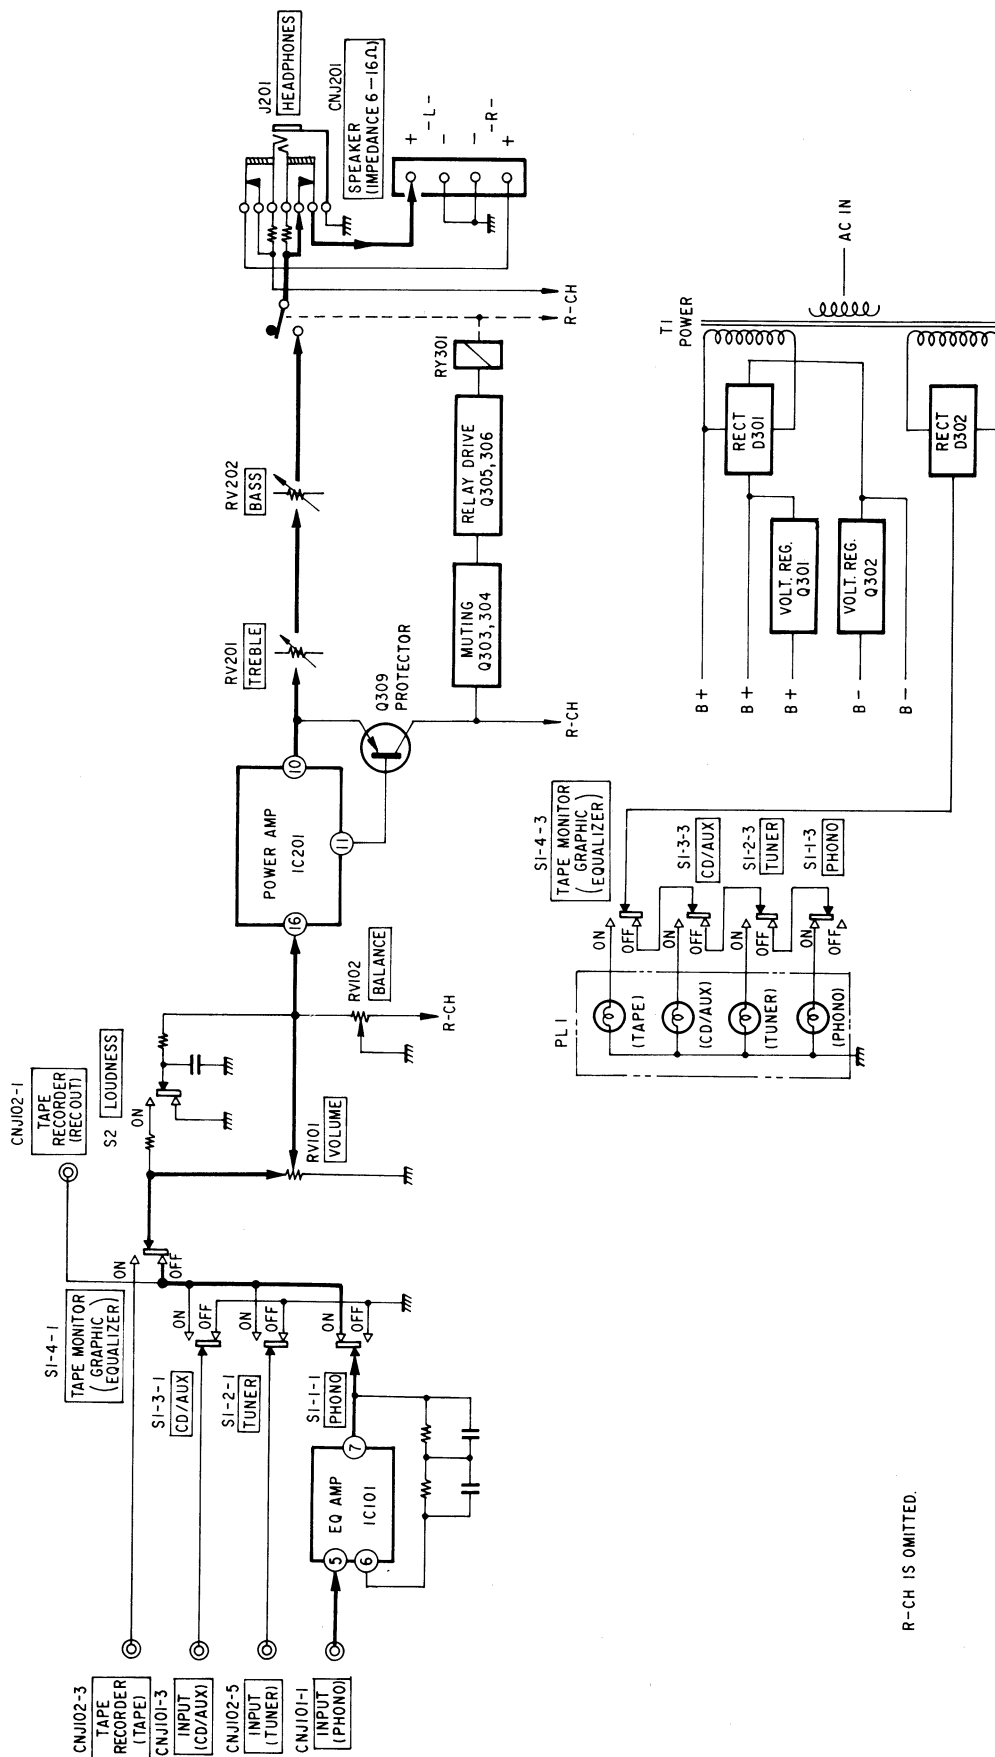


SECTION 2 DISASSEMBLY


2-1. REMOVAL


Note: Follow the disassembly procedure in the numerical order given.

CASE

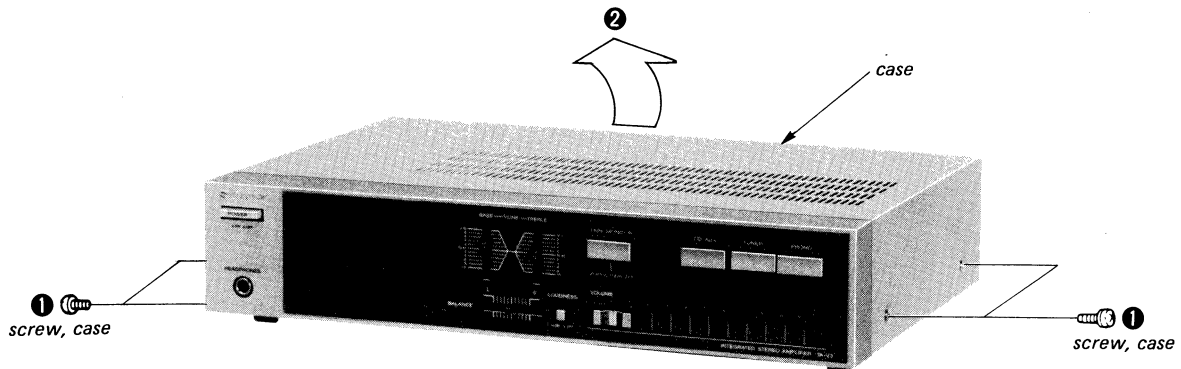


BOTTOM PLATE

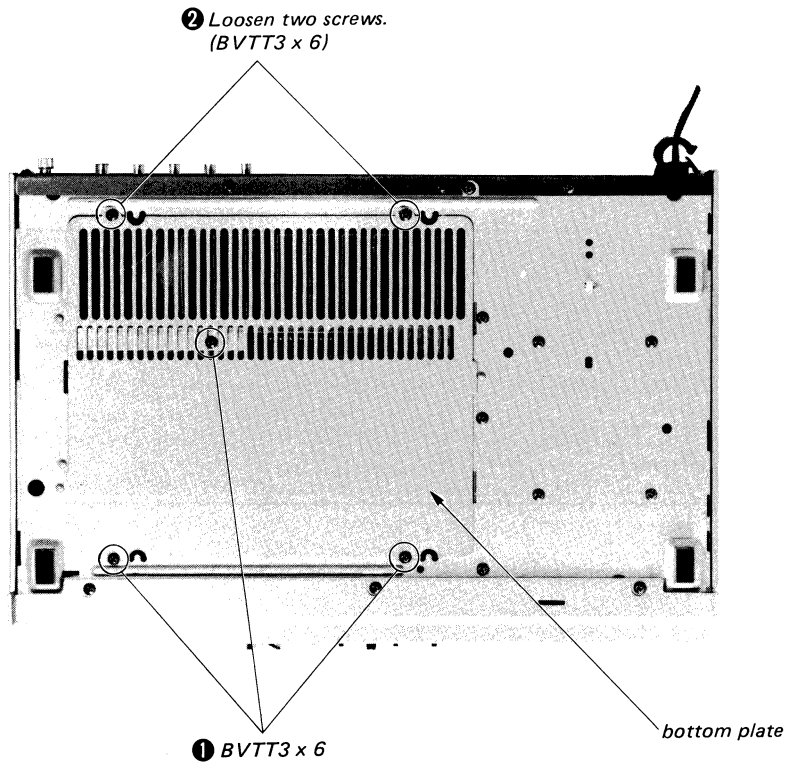

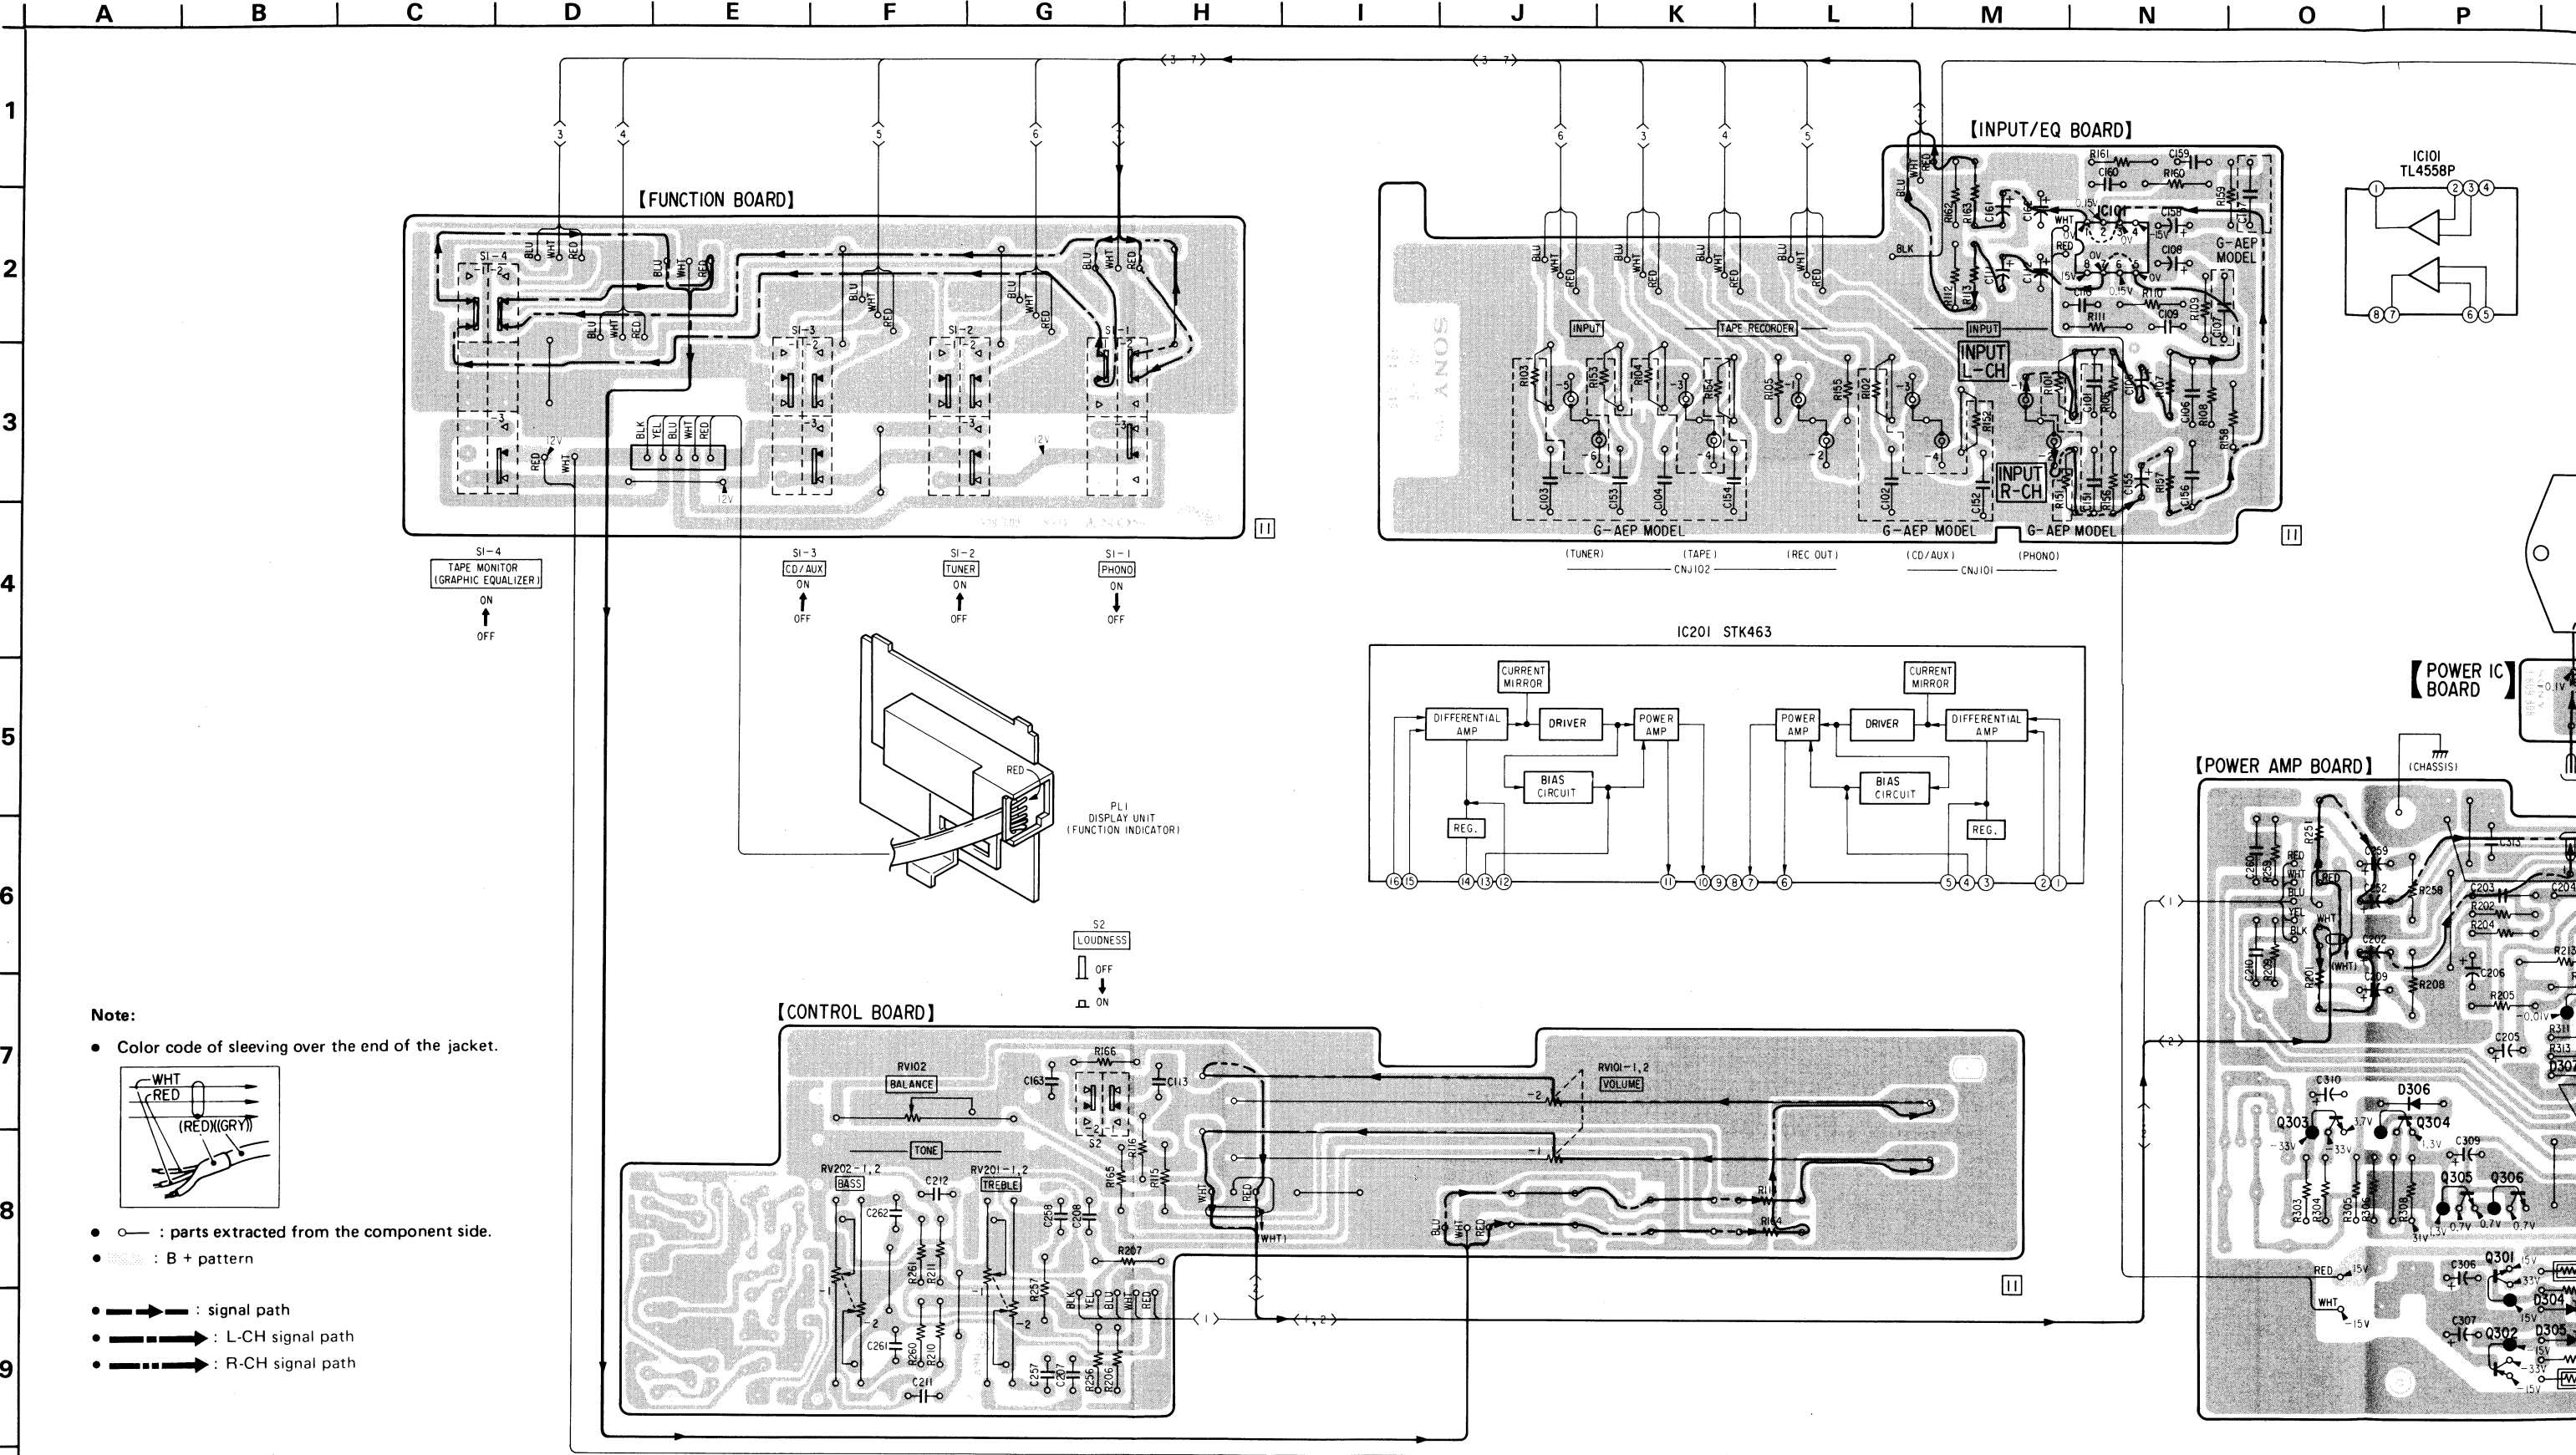



Note:
• Color code of sleeving over the end of the jacket.

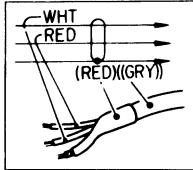

- : parts extracted from the component side.
- : B + pattern
- : signal path
- : L-CH signal path
- : R-CH signal path


Q	IC	303	304	305, 306	301, 302	307
D			306			

O P Q R S T U V W X Y Z A1 B1 C1 D1

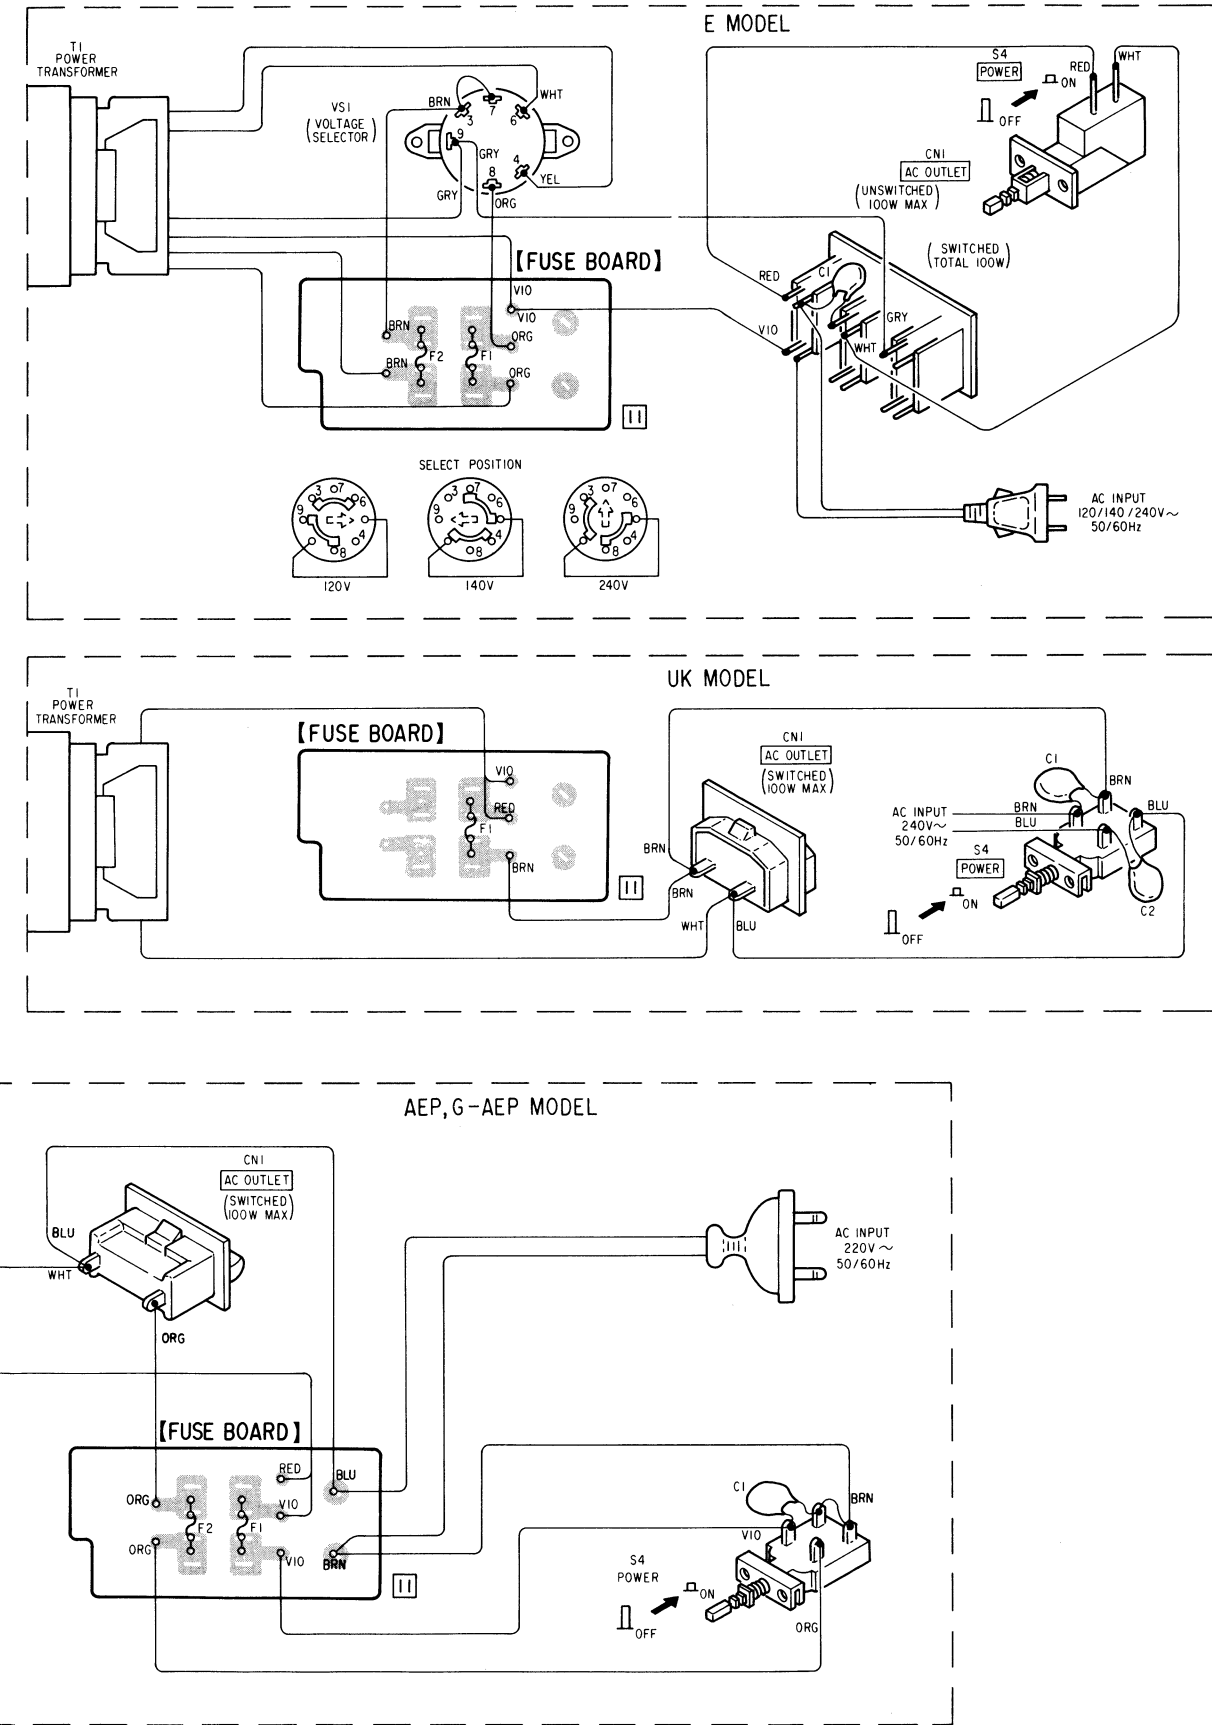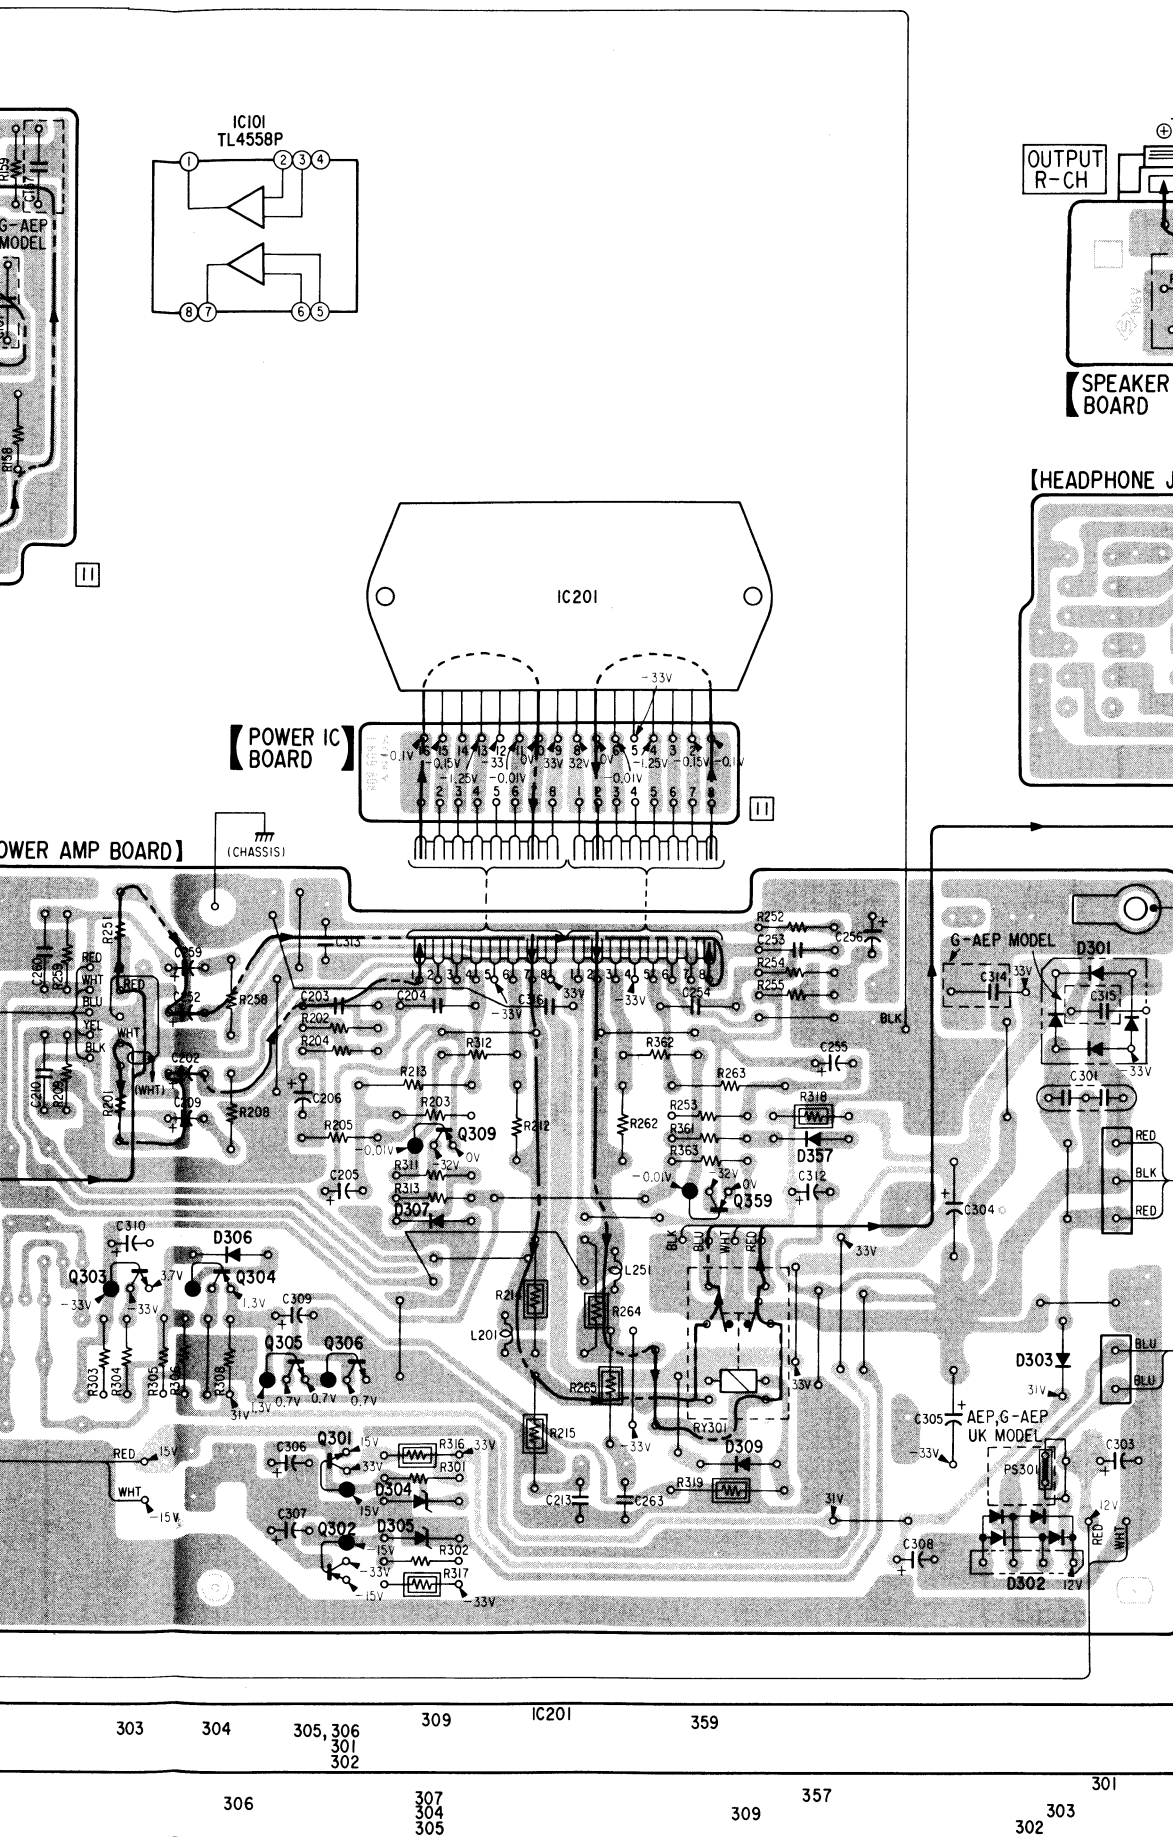


TA-V3 TA-V3



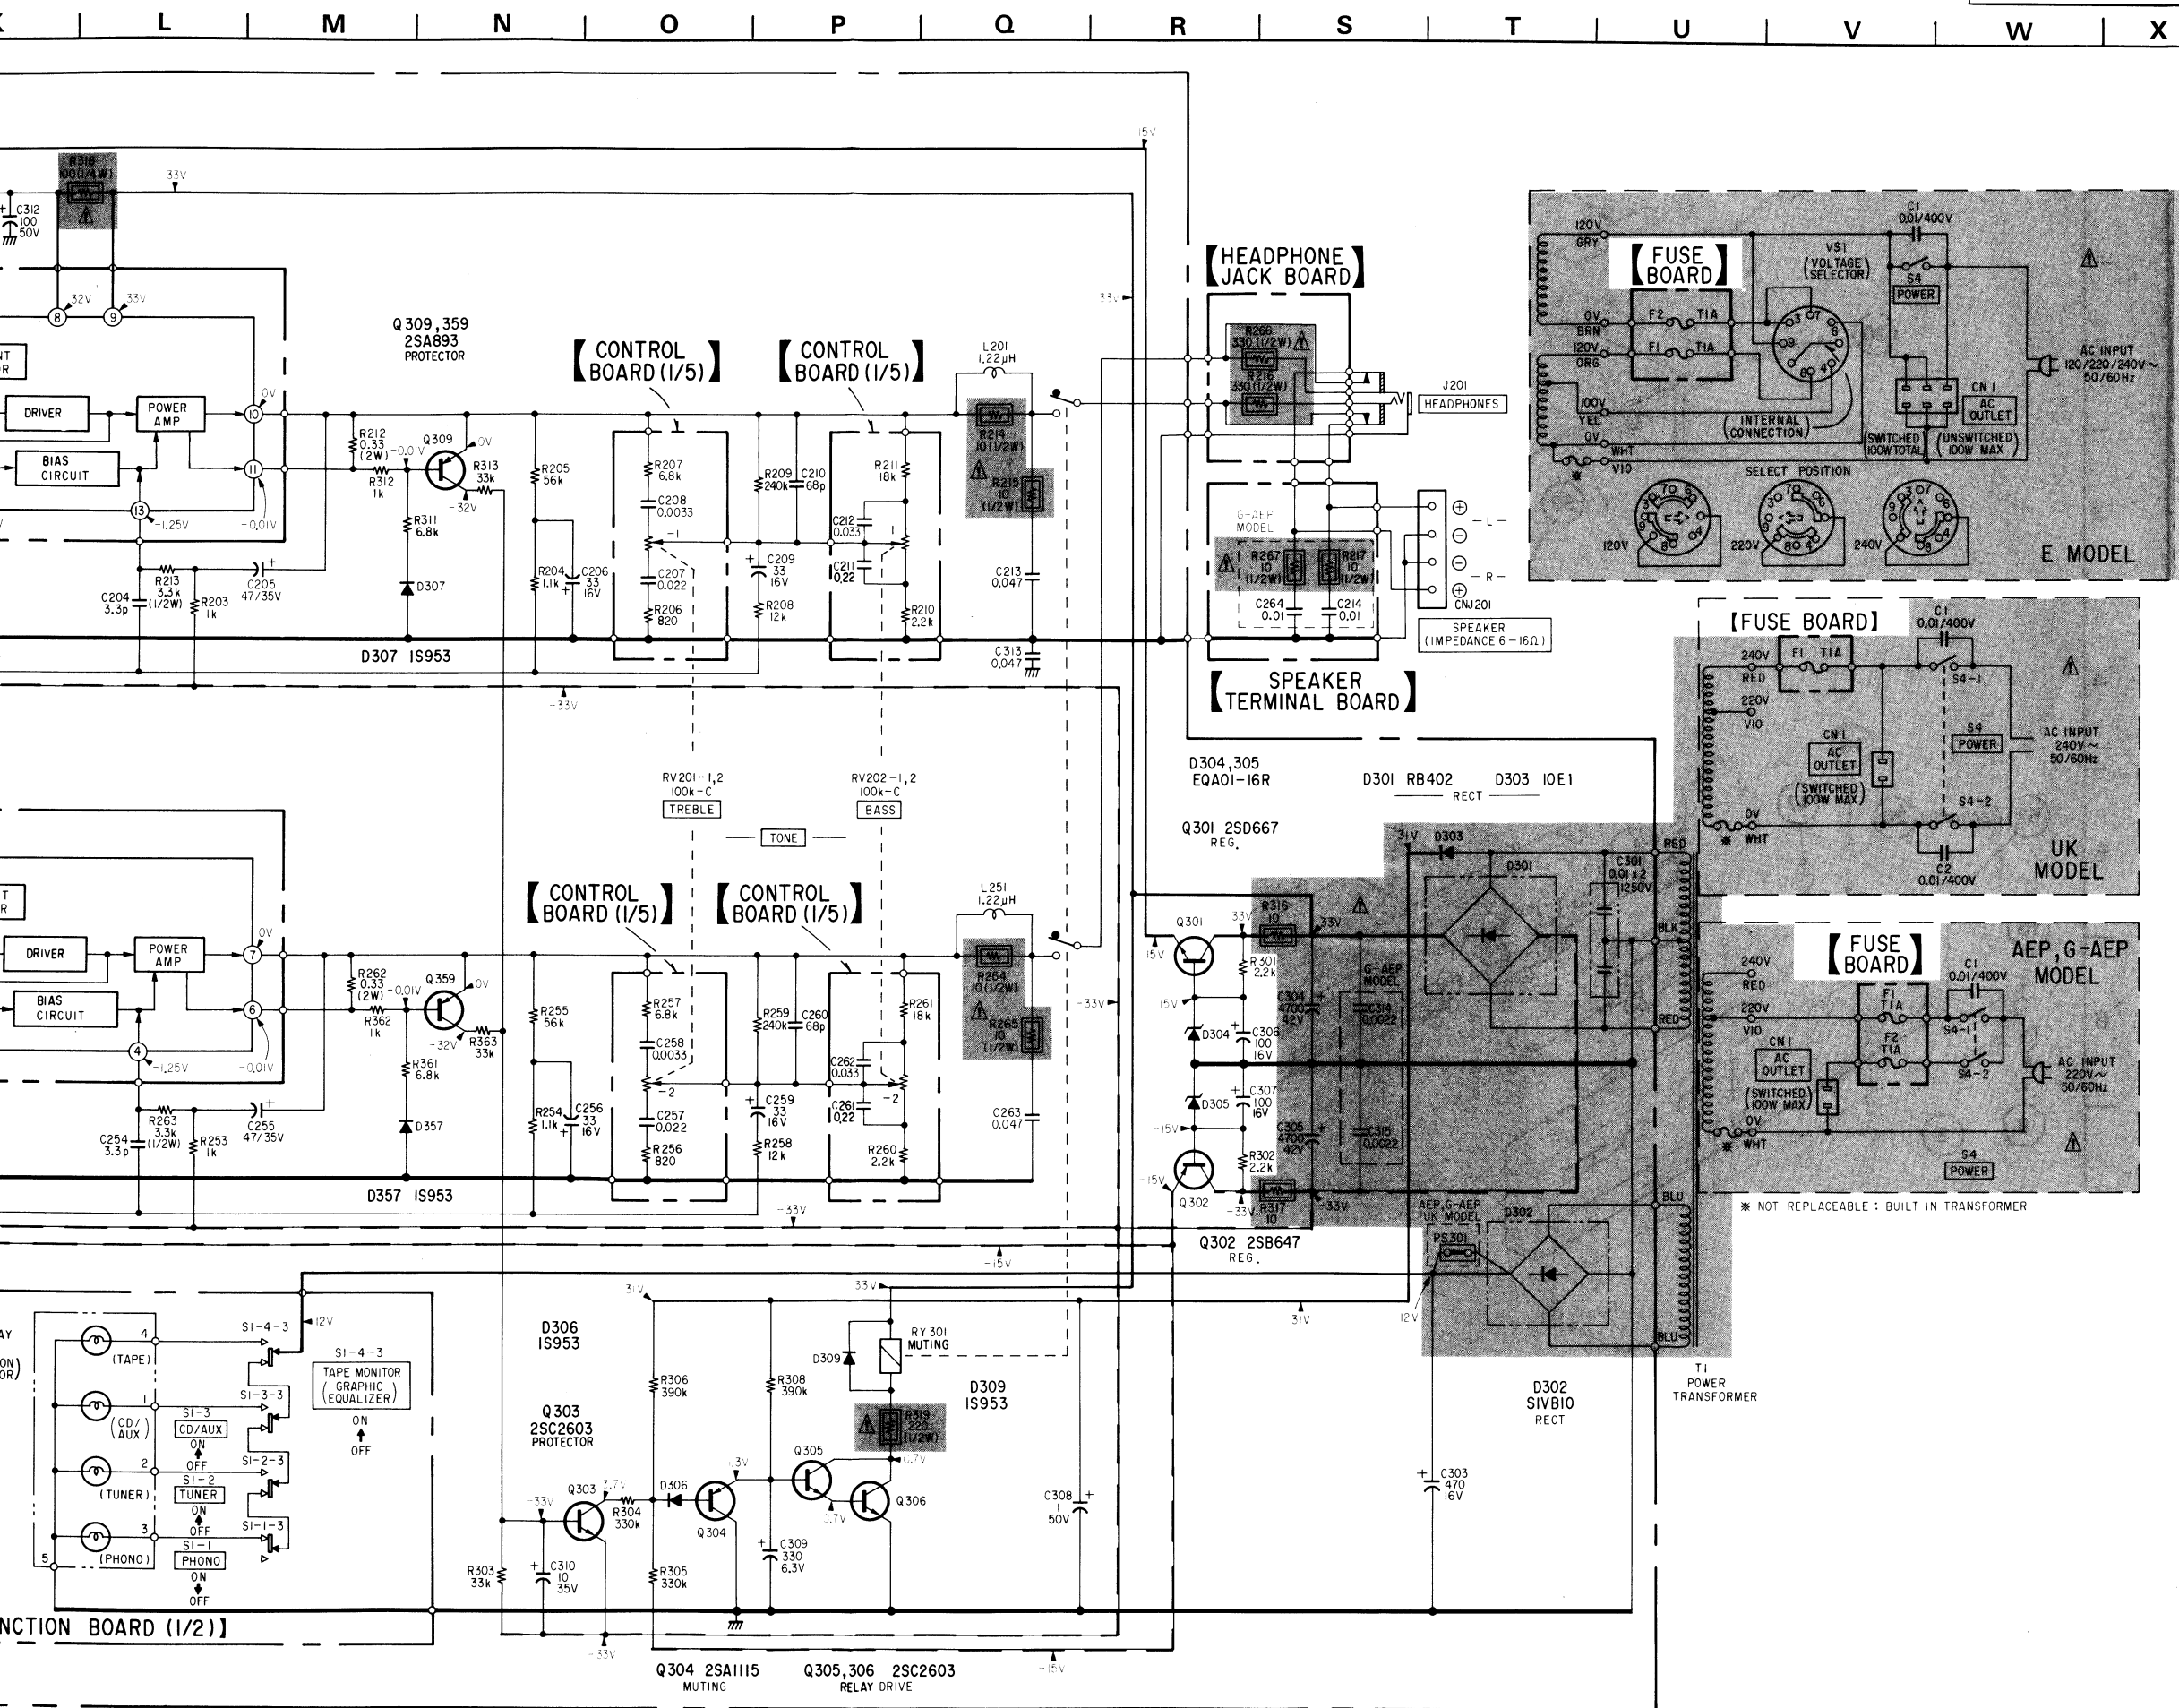

SEMICONDUCTOR LEAD LAYOUTS

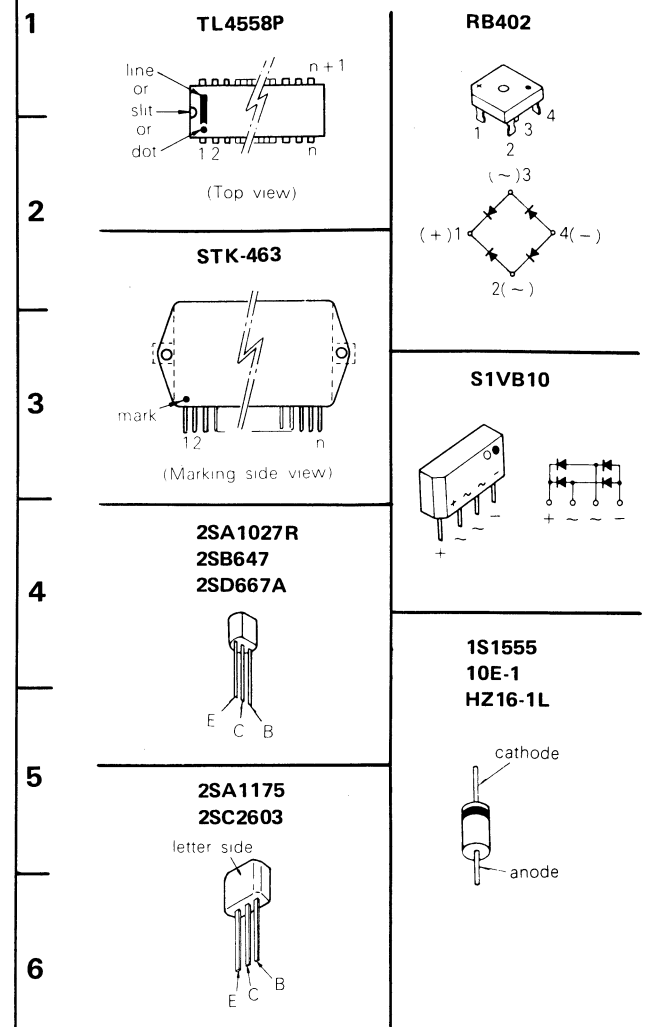


- Note:**
- All capacitors are in μF unless otherwise noted. $\text{pF} : \mu\text{F}$ 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, $\frac{1}{4}\text{W}$ unless otherwise noted. $\text{k}\Omega : 1000\Omega$, $\text{M}\Omega : 1000\text{k}\Omega$
 - : nonflammable resistor.
 - : panel designation.
 - : B+ bus.
 - : B- bus.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken under no-signal conditions.
 - Voltage variations may be noted due to normal production tolerances.
 - Switch

Ref. No.	Switch	Position
S1	function	PHONO
S2	LOUDNESS	OFF
S4	POWER	OFF


Note: Voltages are measured with a VOM (50k Ω /V).


SECTION 4 EXPLODED VIEWS AND PARTS LIST

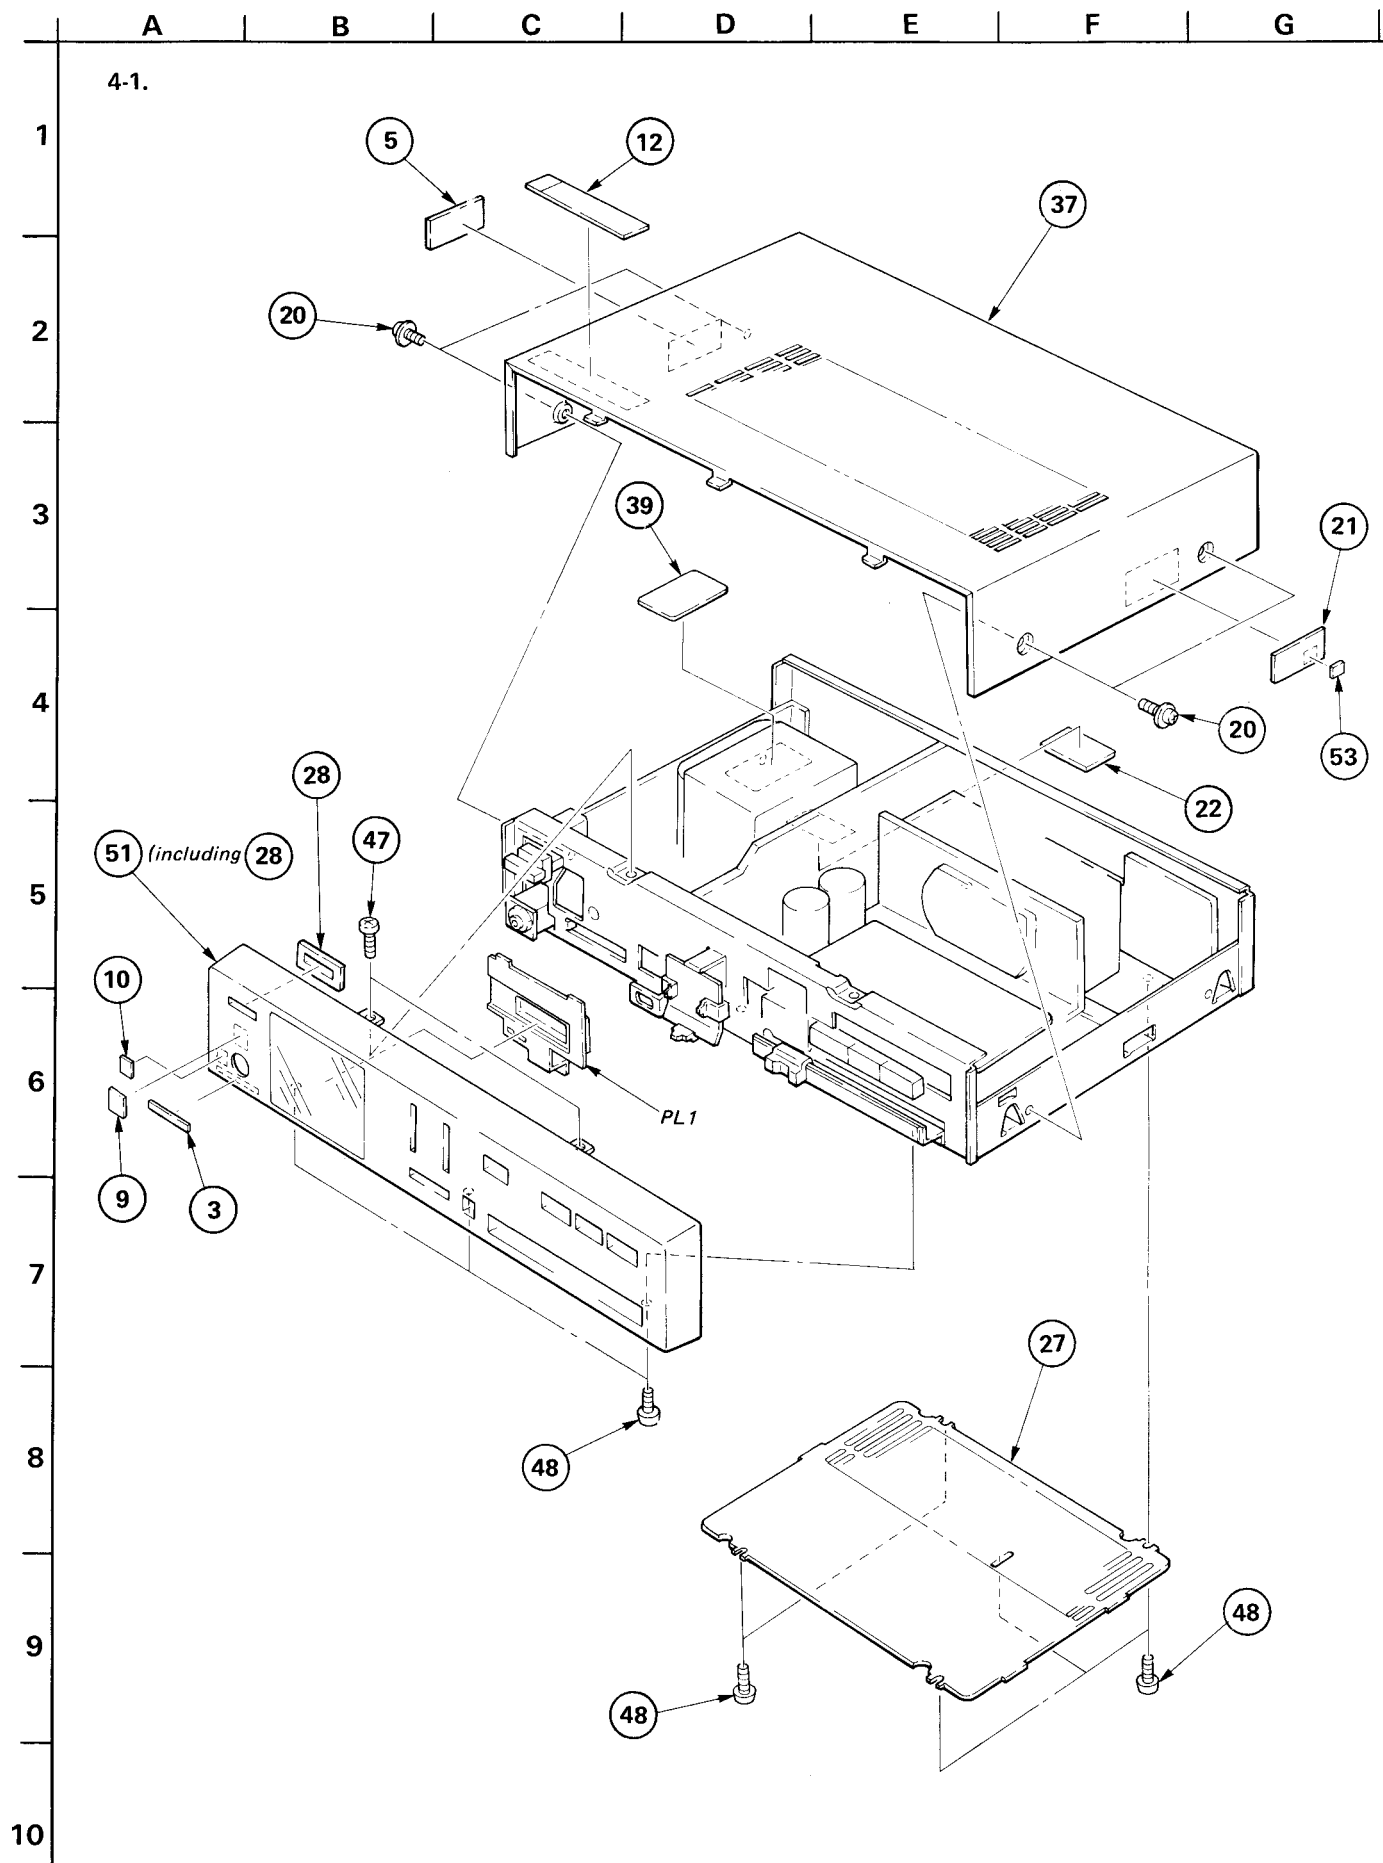

A B C D E F G

4-2.

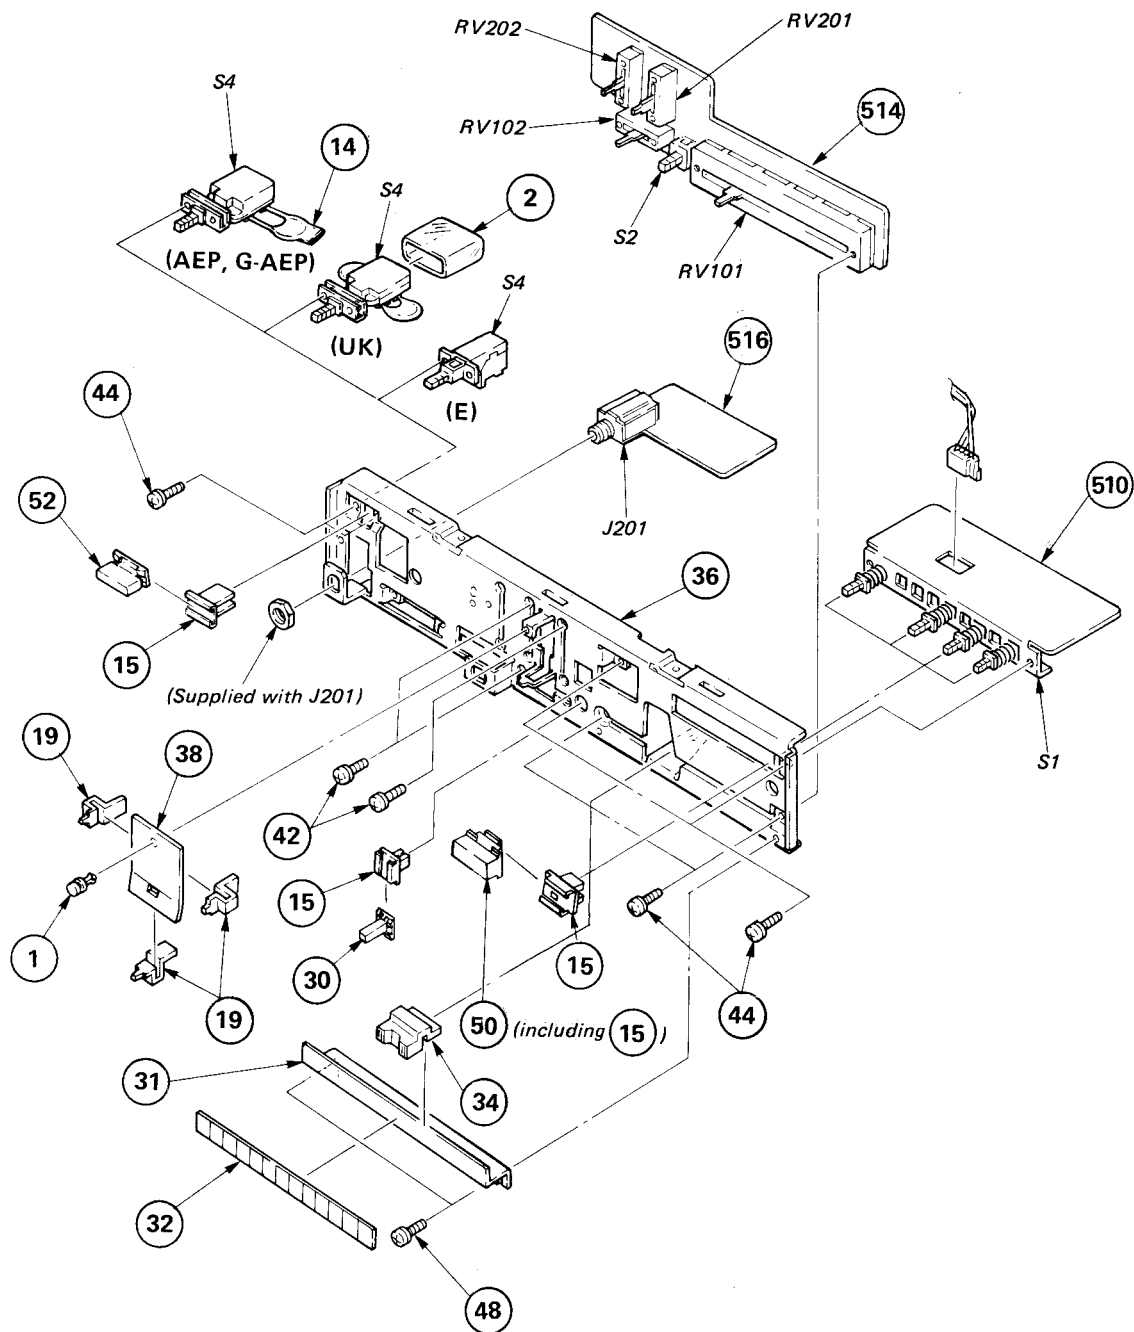

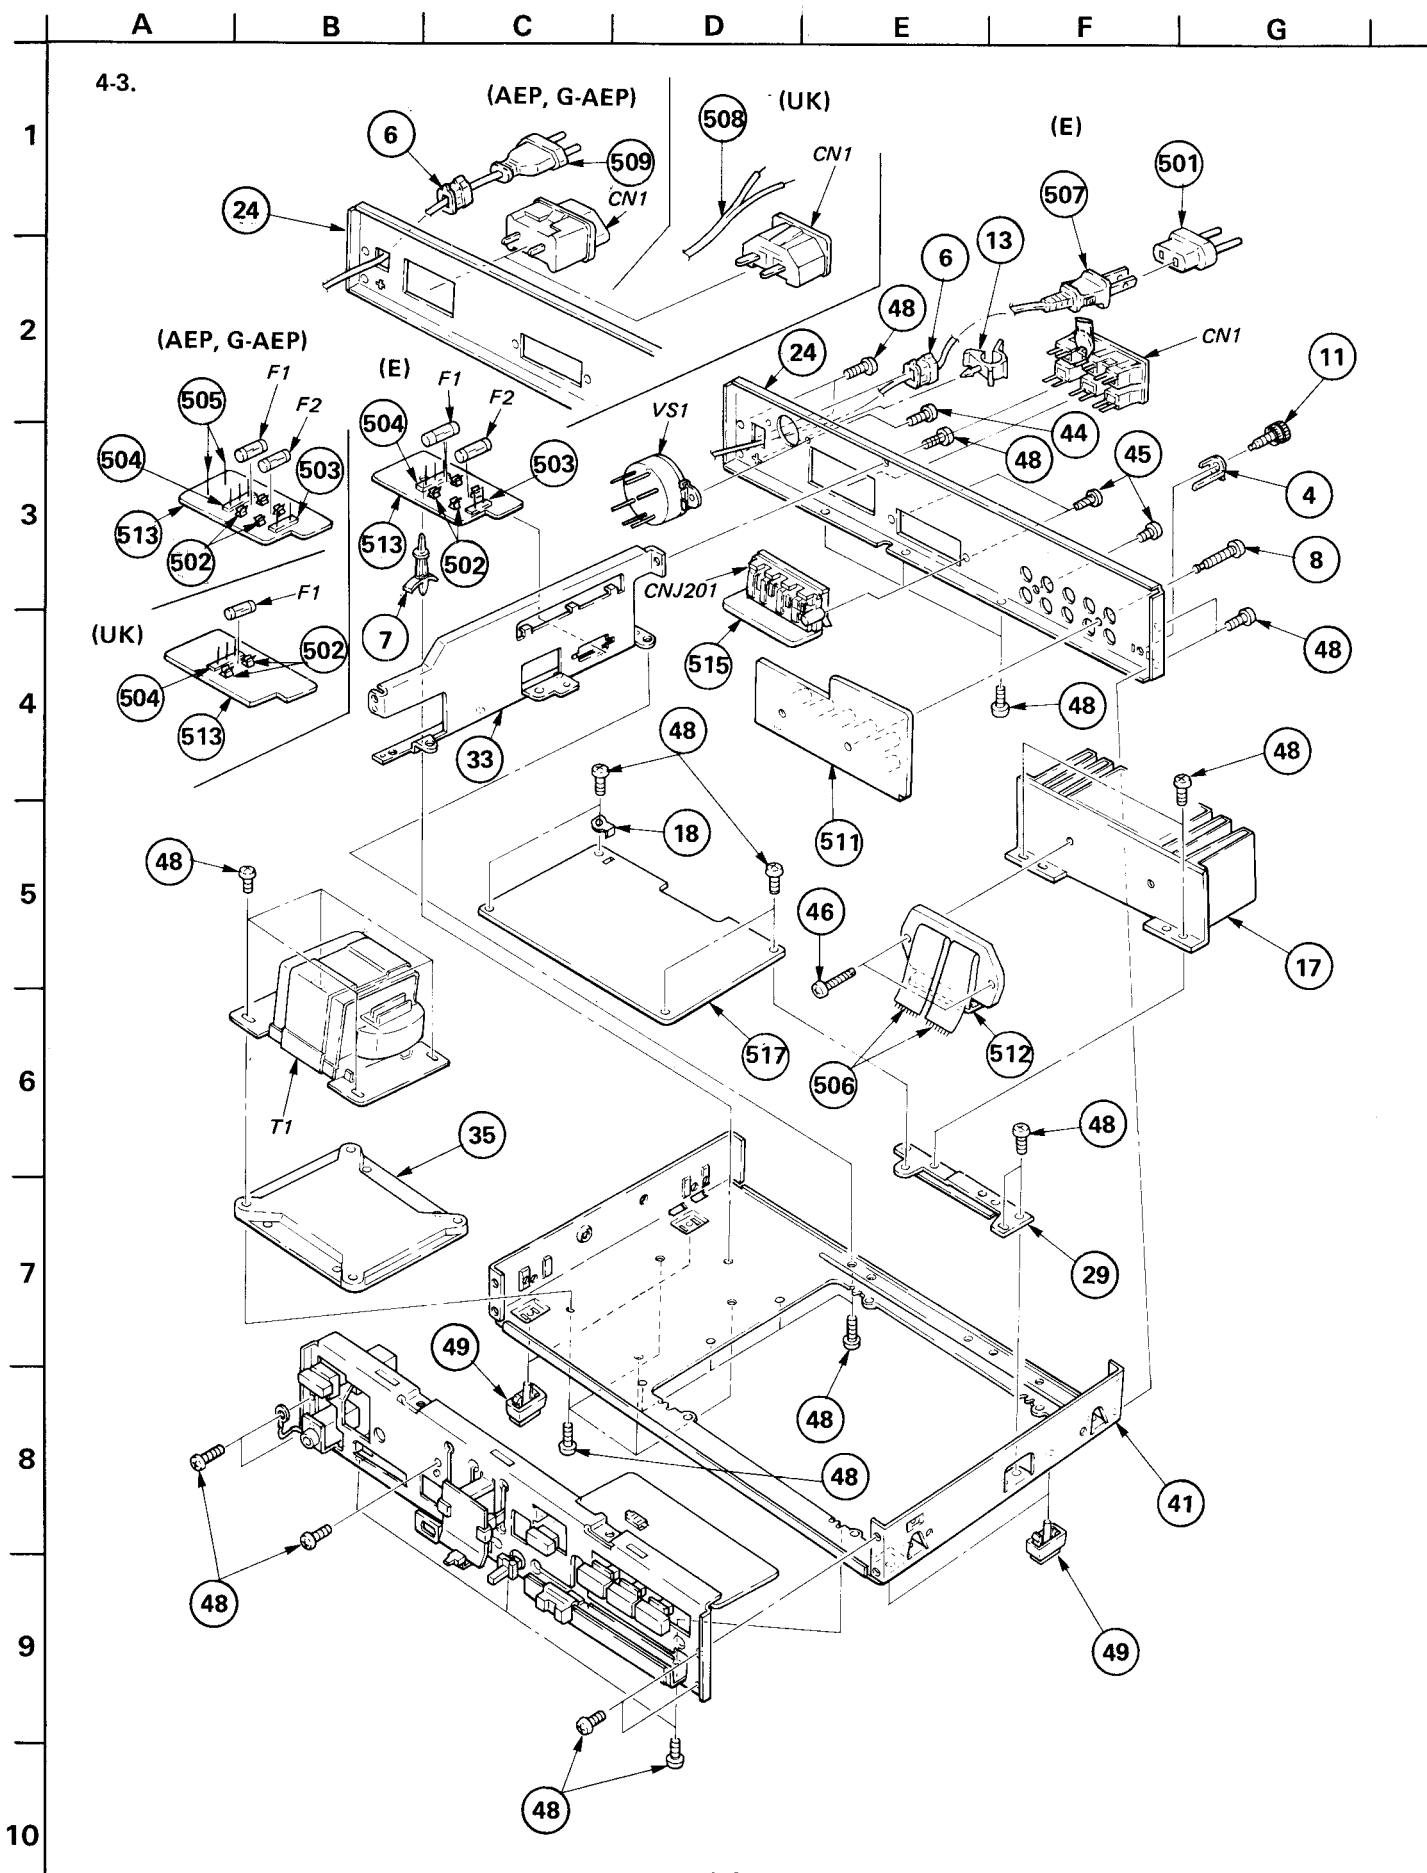

GENERAL SECTION

No.	Part No.	Description
1	3-531-576-01	RIVET
2	3-559-001-00	(UK)...COVER, POWER SWITCH
3	▲;3-701-690-00	(UK).....LABEL (MADE IN JAPAN)
4	3-701-993-00	SPACER, TERMINAL
5	3-703-043-00	(UK).....LABEL, CAUTION, MAIN
6	3-703-244-00	BUSHING, CORD
7	▲;3-703-353-05	SUPPORT, PC BOARD
8	3-703-473-00	SCREW, TERMINAL
9	3-703-710-01	(UK,AEP,G-AEP)...STICKER, SONY SYMBOL (12)
10	3-703-713-01	STICKER, SONY SYMBOL (10)
11	▲;3-706-165-00	SCREW
12	4-861-045-00	LABEL, CAUTION
13	4-869-217-00	CLIP, CORD
14	4-875-455-01	(AEP,G-AEP)...COVER (DIA. 20), CAPACITOR
15	4-875-466-00	JOINT (F2), KNOB
16	
17	▲;4-881-415-00	HEAT SINK (A)
18	▲;4-881-629-00	PLATE (A), GROUND
19	4-886-818-01	KNOB, SLIDE CONTROL
20	4-886-821-11	SCREW, M3 CASE
21	4-886-857-00	(AEP,G-AEP)...LABEL, MODEL NUMBER
22	4-886-858-00	(UK).....LABEL, MODEL NUMBER
22	4-886-859-00	(E).....LABEL, MODEL NUMBER
23	
24	▲;4-886-861-21	(AEP,G-AEP)...PANEL, REAR
24	▲;4-886-861-31	(UK).....PANEL, REAR
24	▲;4-886-861-41	(E).....PANEL, REAR
25	
26	
27	▲;4-886-894-11	PLATE, BOTTOM
28	4-886-976-00	ESCUTCHEON, POWER KNOB
29	▲;4-888-022-00	HOLDER, HEAT SINK
30	4-888-025-00	KNOB (D), PUSH
31	▲;4-888-027-00	GUIDE, CONTROL
32	4-888-029-00	ORNAMENT, CONTROL
33	▲;4-888-030-00	REINFORCEMENT
34	4-888-031-00	KNOB, CONTROL, SLIDE
35	▲;4-888-032-00	BASE, TRANSFORMER
36	▲;4-888-034-00	PANEL, SUB
37	4-888-035-00	CASE
38	▲;4-888-040-00	PLATE (A), BACK, CONTROL
39	4-888-041-00	CUSHION, TRANSFORMER
40	
41	▲;4-888-214-11	CHASSIS
42	7-621-255-35	SCREW +P 2X5
43	7-623-508-01	LUG, 3

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers.
- MF: μF, PF: μμF.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F : nonflammable

COILS

- MMH : mH, UH : μH

GENERAL SECTION

No.	Part No.	Description
44	7-682-647-01	SCREW +PS 3X6
45	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3
46	7-685-650-71	SCREW +BVTP 3X16 TYPE2 IT-3
47	7-685-751-09	SCREW +PTT 3X6 (S)
48	7-685-871-01	SCREW +BVTT 3X6 (S)
49	X-4886-405-1	FOOT ASSY
50	X-4886-809-0	KNOB ASSY, PUSH
51	X-4886-810-1	FRONT PANEL ASSY
52	X-4886-903-0	KNOB (L.S) ASSY, POWER
53	3-703-591-02	(G-AEP)....LABEL (23585S)(SMALL), FTZ

ACCESSORY & PACKING MATERIAL

No.	Part No.	Description
101	3-701-630-00	BAG, POLYETHYLENE
102	3-773-297-11	(AEP,UK,E)....MANUAL, INSTRUCTION
103	3-773-297-41	(AEP,G-AEP)...MANUAL, INSTRUCTION
104	4-855-809-00	SHEET, PROTECTION
105	4-888-012-00	CUSHION (RIGHT-E), UPPER
106	4-888-013-00	CUSHION (LEFT-E), UPPER
107	4-888-014-00	CUSHION (RIGHT-E), LOWER
108	4-888-015-00	CUSHION (LEFT-E), LOWER
109	4-888-021-00	INDIVIDUAL CARTON

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

SEMICONDUCTORS

In each case, U : μ, for example:
 UA....: μA...., UPA....: μPA...., UPC....: μPC,
 UPD....: μPD....

ELECTRICAL PARTS

Ref.No.	Part No.	Description
501	▲1-526-565-00	(E)...AC PLUG ADAPTOR
502	▲1-533-131-00	HOLDER, FUSE
▲503	▲1-535-139-00	BASE POST 19MM (10MM PITCH)
▲504	▲1-535-140-00	BASE POST 19MM (10MM PITCH)
▲505	▲1-535-416-00	(AEP,G-AEP)...TERMINAL
506	1-535-466-00	PLATE, JUMPER
507	▲1-551-472-00	(E).....CORD, POWER
508	▲1-551-884-00	(UK).....CORD, POWER
509	▲1-551-908-00	(AEP,G-AEP)...CORD, POWER, EULO PLUG
510	1-609-805-00	PC BOARD, FUNCTION SW
511	▲1-609-806-00	PC BOARD, INPUT & EQ
512	▲1-609-808-00	PC BOARD, POWER IC
▲513	▲1-609-809-00	PC BOARD, FUSE
514	▲1-609-810-00	PC BOARD, CONTROL
515	▲1-609-811-00	PC BOARD, SPEAKER TERMINAL
516	▲1-609-829-00	PC BOARD, H.P JACK
517	A-4388-337-A	(E).....MOUNTED PCB, POWER
517	A-4388-338-A	(G-AEP).....MOUNTED PCB, POWER
517	A-4388-344-A	(AEP,UK).....MOUNTED PCB, POWER
C1	▲1-161-744-00	CAP, CERAMIC 10000PF 400V
C2	▲1-161-744-00	(UK)...CAP, CERAMIC 10000PF 400V
C101	1-161-320-00	CERAMIC 560PF 10% 50V
C102	1-161-315-00	CERAMIC 220PF 10% 50V
C103	1-161-315-00	CERAMIC 220PF 10% 50V
C104	1-161-315-00	CERAMIC 220PF 10% 50V
C105	1-123-354-00	ELECT 3.3MF 20% 50V
C106	1-161-271-00	(AEP,UK,E)...CERAMIC 100PF 5% 50V
C106	1-161-320-00	(G-AEP).....CERAMIC 560PF 5% 50V
C107	1-161-269-00	CERAMIC 68PF 5% 50V
C108	1-123-318-00	ELECT 33MF 20% 16V
C109	1-108-573-00	MYLAR 0.0056MF 5% 50V
C110	1-108-559-00	MYLAR 0.0015MF 5% 50V
C111	1-123-609-00	ELECT 0.33MF 20% 50V
C112	1-123-318-00	ELECT 33MF 20% 16V
C113	1-130-621-00	FILM 0.012MF 5% 50V
C151	1-161-320-00	CERAMIC 560PF 10% 50V
C152	1-161-315-00	CERAMIC 220PF 10% 50V
C153	1-161-315-00	CERAMIC 220PF 10% 50V
C154	1-161-315-00	CERAMIC 220PF 10% 50V
C155	1-123-354-00	ELECT 3.3MF 20% 50V
C156	1-161-271-00	(AEP,UK,E)...CERAMIC 100PF 5% 50V
C156	1-161-320-00	(G-AEP).....CERAMIC 560PF 5% 50V
C157	1-161-269-00	CERAMIC 68PF 5% 50V
C158	1-123-318-00	ELECT 33MF 20% 16V
C159	1-108-573-00	MYLAR 0.0056MF 5% 50V

ELECTRICAL PARTS

Ref.No.	Part No.	Description
C160	1-108-559-00	MYLAR 0.0015MF 5% 50V
C161	1-123-609-00	ELECT 0.33MF 20% 50V
C162	1-123-318-00	ELECT 33MF 20% 16V
C163	1-130-621-00	FILM 0.012MF 5% 50V
C202	1-123-354-00	ELECT 3.3MF 20% 50V
C203	1-161-315-00	CERAMIC 220PF 10% 50V
C204	1-161-253-00	CERAMIC 3.3PF 10% 50V
C205	1-123-359-00	ELECT 47MF 20% 35V
C206	1-123-318-00	ELECT 33MF 20% 16V
C207	1-130-624-00	FILM 0.022MF 5% 50V
C208	1-108-567-00	MYLAR 0.0033MF 5% 50V
C209	1-123-318-00	ELECT 33MF 20% 16V
C210	1-161-269-00	CERAMIC 68PF 5% 50V
C211	1-130-636-00	FILM 0.22MF 5% 50V
C212	1-130-626-00	FILM 0.033MF 5% 50V
C213	1-108-595-00	MYLAR 0.047MF 5% 50V
C214	1-108-579-00	MYLAR 0.01MF 5% 50V
C252	1-123-354-00	ELECT 3.3MF 20% 50V
C253	1-161-315-00	CERAMIC 220PF 10% 50V
C254	1-161-253-00	CERAMIC 3.3PF 10% 50V
C255	1-123-359-00	ELECT 47MF 20% 35V
C256	1-123-318-00	ELECT 33MF 20% 16V
C257	1-130-624-00	FILM 0.022MF 5% 50V
C258	1-108-567-00	MYLAR 0.0033MF 5% 50V
C259	1-123-318-00	ELECT 33MF 20% 16V
C260	1-161-269-00	CERAMIC 68PF 5% 50V
C261	1-130-636-00	FILM 0.22MF 5% 50V
C262	1-130-626-00	FILM 0.033MF 5% 50V
C263	1-108-595-00	MYLAR 0.047MF 5% 50V
C264	1-108-579-00	MYLAR 0.01MF 5% 50V
C301	▲1-102-394-00	CERAMIC 0.01MFX2 250V
C303	1-123-487-00	ELECT 470MF 20% 16V
C304	▲1-124-362-00	ELECT 4700MF 20% 42V
C305	▲1-124-362-00	ELECT 4700MF 20% 42V
C306	1-123-484-00	ELECT 100MF 20% 16V
C307	1-123-484-00	ELECT 100MF 20% 16V
C308	1-123-380-00	ELECT 1MF 20% 50V
C309	1-123-476-00	ELECT 330MF 20% 6.3V
C310	1-123-341-00	ELECT 10MF 20% 35V
C312	1-123-513-00	ELECT 100MF 20% 50V
C313	1-108-595-00	MYLAR 0.047MF 5% 50V
C314	▲1-161-326-00	CERAMIC 0.0022MF 30% 50V
C315	▲1-161-326-00	CERAMIC 0.0022MF 30% 50V
C316	▲1-101-002-21	CERAMIC 0.0022MF 50V

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (▲-△△△-△△△-XX or ▲-△△△△-△△△-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in μF . Common capacitors are omitted. Refer to the following lists for their part numbers.

MF: μF , PF: μF .

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F : nonflammable

COILS

- MMH : mH, UH : μH

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

SEMICONDUCTORS

In each case, U : μ , for example:
 UA...: μA ..., UPA...: μPA ..., UPC...: μPC ,
 UPD...: μPD ...

ELECTRICAL PARTS

Ref.No.	Part No.	Description
CN1	▲.1-526-574-00	(E).....OUTLET, AC
CN1	▲.1-526-694-00	(AEP,G-AEP)...OUTLET, AC
CN1	▲.1-526-751-00	(UK).....OUTLET, AC
CNJ101	1-507-741-21	JACK, PIN 6P
CNJ102	1-507-740-00	JACK, PIN 4P
CNJ201	1-536-705-00	TERMINAL BOARD (SP)
D301	▲.8-719-300-57	DIODE RB402
D302	▲.8-719-521-10	DIODE 1SVB10
D303	▲.8-719-200-01	DIODE 10E-1
D304	8-719-901-61	DIODE HZ16-1L
D305	8-719-901-61	DIODE HZ16-1L
D306	8-719-815-55	DIODE 1S1555
D307	8-719-815-55	DIODE 1S1555
D309	8-719-815-55	DIODE 1S1555
D357	8-719-815-55	DIODE 1S1555
F1	▲.1-532-078-00	FUSE, TIME LAG
F2	▲.1-532-078-00	FUSE, TIME LAG
PL1	▲.1-518-530-00	INDICATOR, LAMP
IC101	8-759-935-58	IC TL4558P
IC201	8-749-946-30	IC STK-463
J201	1-507-689-00	JACK, LARGE TYPE
L201	▲.1-420-872-00	COIL, AIR CORE
L251	▲.1-420-872-00	COIL, AIR CORE
PS301	▲.1-532-675-00	PROTECTOR, CIRCUIT
Q301	8-729-306-72	TRANSISTOR 2SD667A
Q302	8-729-364-72	TRANSISTOR 2SB647
Q303	8-729-606-32	TRANSISTOR 2SC2603
Q304	8-729-117-54	TRANSISTOR 2SA1175
Q305	8-729-606-32	TRANSISTOR 2SC2603
Q306	8-729-606-32	TRANSISTOR 2SC2603
Q309	8-729-612-77	TRANSISTOR 2SA1027R
Q359	8-729-612-77	TRANSISTOR 2SA1027R
R101	1-246-461-15	CARBON 330 5% 1/4W
R102	1-246-465-15	CARBON 470 5% 1/4W
R103	1-246-465-15	CARBON 470 5% 1/4W
R104	1-246-465-15	CARBON 470 5% 1/4W
R105	1-246-489-00	CARBON 4.7K 5% 1/4W
R106	1-246-513-00	CARBON 47K 5% 1/4W
R107	1-246-473-00	CARBON 1K 5% 1/4W
R108	1-246-539-00	CARBON 560K 5% 1/4W
R109	1-246-471-00	CARBON 820 5% 1/4W
R110	1-246-539-00	CARBON 560K 5% 1/4W
R111	1-246-513-00	CARBON 47K 5% 1/4W
R112	1-246-521-00	CARBON 100K 5% 1/4W

ELECTRICAL PARTS

Ref.No.	Part No.	Description
R113	1-246-473-00	CARBON 1K 5% 1/4W
R114	1-246-481-00	CARBON 2.2K 5% 1/4W
R115	1-246-517-00	CARBON 68K 5% 1/4W
R116	1-246-521-00	CARBON 100K 5% 1/4W
R151	1-246-461-15	CARBON 330 5% 1/4W
R152	1-246-465-15	CARBON 470 5% 1/4W
R153	1-246-465-15	CARBON 470 5% 1/4W
R154	1-246-465-15	CARBON 470 5% 1/4W
R155	1-246-489-00	CARBON 4.7K 5% 1/4W
R156	1-246-513-00	CARBON 47K 5% 1/4W
R157	1-246-473-00	CARBON 1K 5% 1/4W
R158	1-246-539-00	CARBON 560K 5% 1/4W
R159	1-246-471-00	CARBON 820 5% 1/4W
R160	1-246-539-00	CARBON 560K 5% 1/4W
R161	1-246-513-00	CARBON 47K 5% 1/4W
R162	1-246-521-00	CARBON 100K 5% 1/4W
R163	1-246-473-00	CARBON 1K 5% 1/4W
R164	1-246-481-00	CARBON 2.2K 5% 1/4W
R165	1-246-517-00	CARBON 68K 5% 1/4W
R166	1-246-521-00	CARBON 100K 5% 1/4W
R201	1-246-473-00	CARBON 1K 5% 1/4W
R202	1-246-515-00	CARBON 56K 5% 1/4W
R203	1-246-473-00	CARBON 1K 5% 1/4W
R204	1-246-474-00	CARBON 1.1K 5% 1/4W
R205	1-246-515-00	CARBON 56K 5% 1/4W
R206	1-246-471-00	CARBON 820 5% 1/4W
R207	1-246-493-00	CARBON 6.8K 5% 1/4W
R208	1-246-499-00	CARBON 12K 5% 1/4W
R209	1-246-530-00	CARBON 240K 5% 1/4W
R210	1-246-481-00	CARBON 2.2K 5% 1/4W
R211	1-246-503-00	CARBON 18K 5% 1/4W
R212	1-207-615-00	RES, METAL PLATE 0.33 2W
R213	1-244-885-00	CARBON 3.3K 5% 1/2W
R214	▲.1-247-192-00	CARBON 10 5% 1/2W F
R215	▲.1-247-192-00	CARBON 10 5% 1/2W F
R216	▲.1-247-228-00	CARBON 330 5% 1/2W F
R251	1-246-473-00	CARBON 1K 5% 1/4W
R252	1-246-515-00	CARBON 56K 5% 1/4W
R253	1-246-473-00	CARBON 1K 5% 1/4W
R254	1-246-474-00	CARBON 1.1K 5% 1/4W
R255	1-246-515-00	CARBON 56K 5% 1/4W
R256	1-246-471-00	CARBON 820 5% 1/4W
R257	1-246-493-00	CARBON 6.8K 5% 1/4W
R258	1-246-499-00	CARBON 12K 5% 1/4W
R259	1-246-530-00	CARBON 240K 5% 1/4W

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (▲-▲▲-▲▲-XX or ▲-▲▲-▲-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in μ F. Common capacitors are omitted. Refer to the following lists for their part numbers.
- MF: μ F, PF: μ F.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F: nonflammable

COILS

- MMH: mH, UH: μ H

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

SEMICONDUCTORS

In each case, U: μ , for example:
 UA...: μ A..., UPA...: μ PA..., UPC...: μ PC,
 UPD...: μ PD...

ELECTRICAL PARTS

Ref.No.	Part No.	Description
R260	1-246-481-00	CARBON 2.2K 5% 1/4W
R261	1-246-503-00	CARBON 18K 5% 1/4W
R262	1-207-615-00	RES, METAL PLATE 0.33 2W
R263	1-244-885-00	CARBON 3.3K 5% 1/2W
R264	△.1-247-192-00	CARBON 10 5% 1/2W F
R265	△.1-247-192-00	CARBON 10 5% 1/2W F
R266	△.1-247-228-00	CARBON 330 5% 1/2W F
R301	1-246-481-00	CARBON 2.2K 5% 1/4W
R302	1-246-481-00	CARBON 2.2K 5% 1/4W
R303	1-246-509-00	CARBON 33K 5% 1/4W
R304	1-246-533-00	CARBON 330K 5% 1/4W
R305	1-246-533-00	CARBON 330K 5% 1/4W
R306	1-246-535-00	CARBON 390K 5% 1/4W
R308	1-246-535-00	CARBON 390K 5% 1/4W
R311	1-246-493-00	CARBON 6.8K 5% 1/4W
R312	1-246-473-00	CARBON 1K 5% 1/4W
R313	1-246-509-00	CARBON 33K 5% 1/4W
R316	△.1-247-083-00	CARBON 10 5% 1/4W F
R317	△.1-247-083-00	CARBON 10 5% 1/4W F
R318	△.1-247-107-00	CARBON 100 5% 1/4W F
R319	△.1-247-224-00	CARBON 220 5% 1/2W F
R361	1-246-493-00	CARBON 6.8K 5% 1/4W
R362	1-246-473-00	CARBON 1K 5% 1/4W
R363	1-246-509-00	CARBON 33K 5% 1/4W
RV101	1-228-381-00	RES, VAR, SLIDE 250K
RV102	1-228-379-00	RES, VAR, SLIDE 250K
RV201	1-228-380-00	RES, VAR, SLIDE 100K
RV202	1-228-380-00	RES, VAR, SLIDE 100K
RY301	1-515-503-00	RELAY
S1	1-554-443-00	SWITCH, PUSH (4 KEY)
S2	1-554-444-00	SWITCH, PUSH (1 KEY)
S4	△.1-553-447-00	(AEP,G-AEP,UK)....SWITCH, POWER
S4	△.1-553-318-00	(E).....SWITCH, POWER
T1	△.1-447-553-00	(E).....TRANSFORMER, POWER
T1	△.1-447-554-00	(AEP,G-AEP,UK)....TRANSFORMER, POWER
VS1	△.1-526-576-31	(E).....SELECTOR, POWER VOLTAGE

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "△" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (△-△△△-△△△-XX or △-△△△△-△△△-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in μ F. Common capacitors are omitted. Refer to the following lists for their part numbers. MF: μ F, PF: μ F.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F : nonflammable

COILS

- MMH : mH, UH : μ H

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

SEMICONDUCTORS

In each case, U : μ , for example:
 UA....: μ A...., UPA....: μ PA...., UPC....: μ PC,
 UPD....: μ PD....

Sony Corporation
 Consumer Products Group
 Technical Support Dept.

9-951-117-11

—20—

English
 83B0496-1
 Printed in Japan
 © 1983